

**Electric and gas cooking surfaces:**

This appliance complies with the eco-design requirements of Regulation (EU) No. 65/2014, which supplements Directive 2010/30/EU, in accordance with EN 60350-2, EN 15181 and EN 50564.

**ENERGY SAVING TIPS**

Make the most of your hot plate's residual heat by switching off cast iron hot plates 10 minutes before the end of your cooking time and glass ceramic hot plates 5 minutes before the end of cooking time.

The base of your pot or pan should cover the hot plate. If it is smaller, precious energy will be wasted and pots that boil over leave encrusted remains that can be difficult to remove.

Cook your food in closed pots or pans with well-fitting lids and use as little water as possible. Cooking with the lid off will greatly increase energy consumption

Use purely flat pots and pans

If you are cooking something that takes a long time, it's worth using a pressure cooker, which is twice as fast and saves a third of the energy.

<b>Product information complies with Commission Delegated Regulation (EU) No. 66/2014</b>			
	Symbol	Value	Unit
Brand		Kaiser	
Identification of the model		KCT 7797 FI RotEm	
EmType of surface cooking		Electric	
Number of cooking zones and/or areas		5	
<b>Heating technology (induction cooking zones and cooking areas, radiant cooking zones and solid plate)</b>			
Rear left		INDUCTION	
Rear centre		X	
Rear right		INDUCTION	
Centre left		X	
Centre centre		INDUCTION	
Centre right		X	
Front left		INDUCTION	
Front centre		X	
Front right		INDUCTION	
<b>For circular cooking areas: diameter of the useful surface area for electrically-heated cooking</b>			
Rear left	∅	18.0	cm
Rear centre	∅	X.X	cm
Rear right	∅	18.0	cm
Centre left	∅	X.X	cm
Centre centre	∅	21.0	cm
Centre right	∅	X.X	cm
Front left	∅	18.0	cm
Front centre	∅	X.X	cm
Front right	∅	18.0	cm
<b>For non-circular cooking areas: length and width of the useful surface area for electrically-heated cooking</b>			
Rear left	L Width	X.X / X.X	cm
Rear centre	L Width	X.X / X.X	cm
Rear right	L Width	X.X / X.X	cm
Centre left	L Width	X.X / X.X	cm
Centre centre	L Width	X.X / X.X	cm
Centre right	L Width	X.X / X.X	cm
Front left	L Width	X.X / X.X	cm
Front centre	L Width	X.X / X.X	cm
Front right	L Width	X.X / X.X	cm
<b>Energy consumption for cooking zone or area, calculated per kg</b>			
Rear left	EC electric cooking	203.3	Wh/Kg
Rear centre	EC electric cooking	X.X	Wh/Kg
Rear right	EC electric cooking	186.5	Wh/Kg
Centre left	EC electric cooking	X.X	Wh/Kg
Centre centre	EC electric cooking	186.6	Wh/Kg
Centre right	EC electric cooking	X.X	Wh/Kg
Front left	EC electric cooking	187.3	Wh/Kg
Front centre	EC electric cooking	X.X	Wh/Kg
Front right	EC electric cooking	188.6	Wh/Kg
Energy consumption for cooking zone or area, calculated per kg	EC electric cooking surface	190.46	Wh/Kg
Number of gas-powered burners		X.X	
<b>Energy efficiency for gas burner</b>			
Rear left	EE gas burner	X.X	
Rear centre	EE gas burner	X.X	
Rear right	EE gas burner	X.X	
Centre left	EE gas burner	X.X	
Centre centre	EE gas burner	X.X	
Centre right	EE gas burner	X.X	
Front left	EE gas burner	X.X	
Front centre	EE gas burner	X.X	
Front right	EE gas burner	X.X	
Energy efficiency for the gas cooking surface	EE gas cooking surface	X.X	